

ROHO Standard Dry Floatation Cushion Sizing Chart


For Cushions

ROHO Low Profile Single (1R) or Dual (2R) Compartment Cushion

ROHO Mid Profile Single (1R) or Dual (2R) Compartment Cushion

ROHO High Profile Single (1R) or Dual (2R) Compartment Cushion

ROHO Enhancer Cushion (ENH)

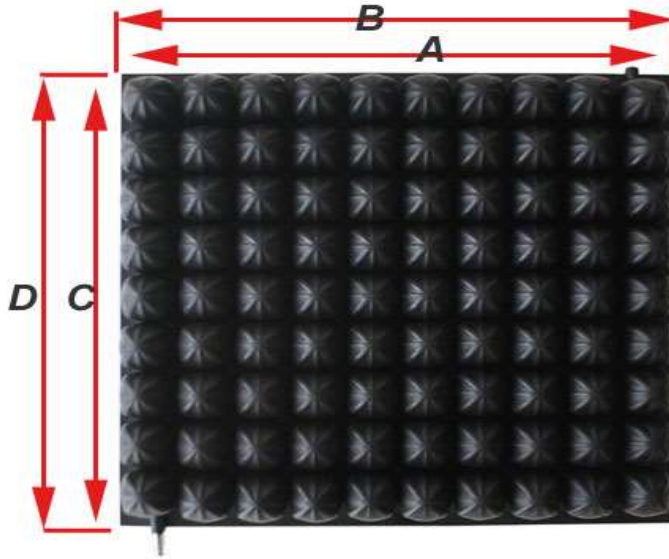

Standard Cushions (1R/2R/ENH) "Fits Chair" Range - Inches

| Width (Inches) | | | | | Depth (Inches) | | | | |
|---|--------------------|-------------------------|-----------------|---|--------------------|-------------------------|-----------------|---|--------------------|
| | | A | B | | | C | D | | |
| Measured Chair Range (narrowest to widest) | Number of Cells | Cushion Cell to Cell | Cushion Base | Measured Chair Range (narrowest to widest) | Number of Cells | Cushion Cell to Cell | Cushion Base | Measured Chair Range (narrowest to widest) | Number of Cells |
| 8.25 | 10 | 5 | 8.25 | 9.75 | 8.25 | 10 | 5 | 8.25 | 9.75 |
| 10 | 11.75 | 6 | 10 | 11.5 | 10 | 11.75 | 6 | 10 | 11.5 |
| 11.75 | 13.25 | 7 | 11.75 | 13.25 | 11.75 | 13.25 | 7 | 11.75 | 13.25 |
| 13.25 | 15 | 8 | 13.25 | 14.75 | 13.25 | 15 | 8 | 13.25 | 14.75 |
| 15 | 16.75 | 9 | 15 | 16.5 | 15 | 16.75 | 9 | 15 | 16.5 |
| 16.75 | 18.5 | 10 | 16.75 | 18.25 | 16.75 | 18.5 | 10 | 16.75 | 18.25 |
| 18.5 | 20.25 | 11 | 18.5 | 20 | 18.5 | 20.25 | 11 | 18.5 | 20 |
| 20.25 | 21.75 | 12 | 20.25 | 21.75 | 20.25 | 21.75 | 12 | 20.25 | 21.75 |
| 21.75 | 23.5 | 13 | 21.75 | 23.5 | 21.75 | 23.5 | 13 | 21.75 | 23.5 |
| 23.5 | 25.25 | 14 | 23.5 | 25 | 23.5 | 25.25 | 14 | 23.5 | 25 |
| 25.25 | 27 | 15 | 25.25 | 26.75 | 25.25 | 27 | 15 | 25.25 | 26.75 |

Select cushion cell height:

- High Profile 4.25 inches
- Mid Profile 3.25 inches
- Low Profile 2.25 inches
- Enhancer various cell heights