


Tsunami Transit

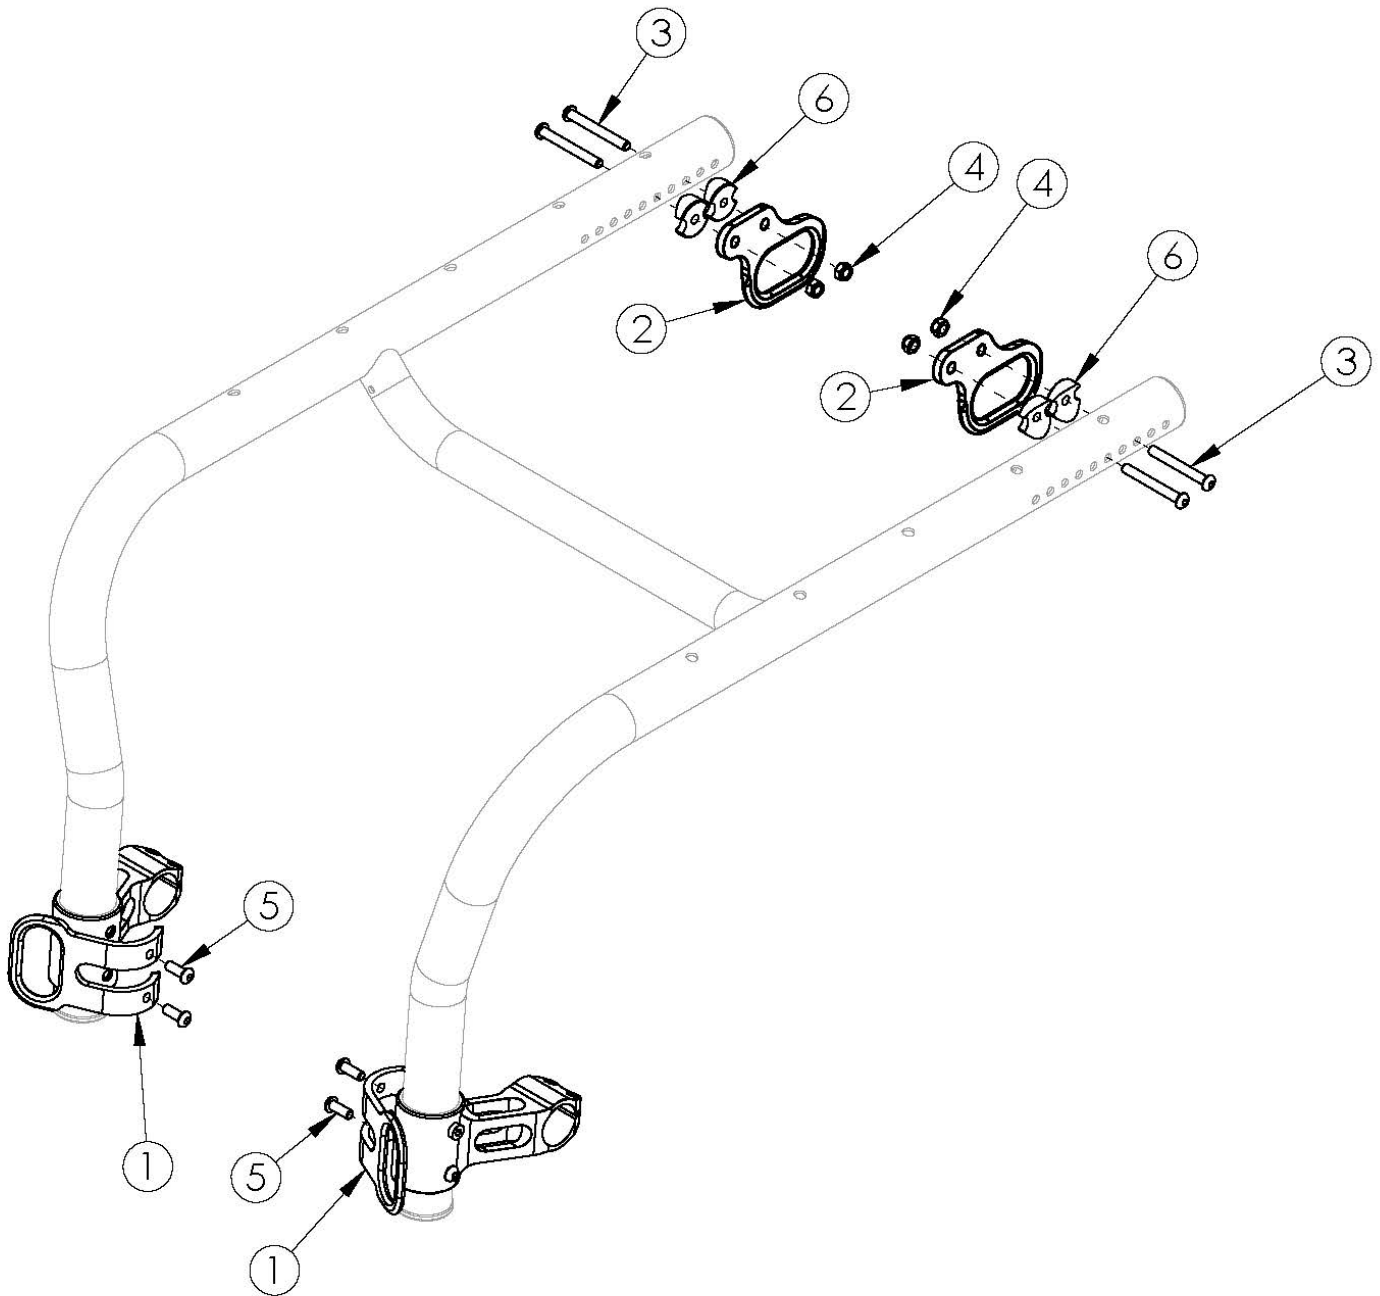

Notice: Chair configuration review required prior to parts being quoted or ordered. <p>

Not available with Heavy Duty Option <p>

This Transit setup is used with the Tsunami Style Backrest <p>

For all backrest hardware options, please see Aluminum Tsunami Backrest Mount and Hardware page <p>

Item Number	Part Number	Description	Quantity	Retail
1-6	506838	Tsunami Transit Bracket Retrofit Kit for Standard Caster Mounts	1	\$390.16

Item Number	Part Number	Description	Quantity	Retail
		<i>Not available with Heavy Duty Option. This kit is a complete retrofit, containing a pair of front and rear transit brackets and hardware.</i>		
3	003232	M6 x 55 BHCS Blk Zc	4	\$9.39
4	100658	M6 Nylock Nut Blk Zn	4	\$1.10
5	101708	M6 x 14 BTN SHCS BLKZC w/Patch	4	\$1.66
6	000248	Saddle 1.375"	4	\$1.66