


# Clik Transit

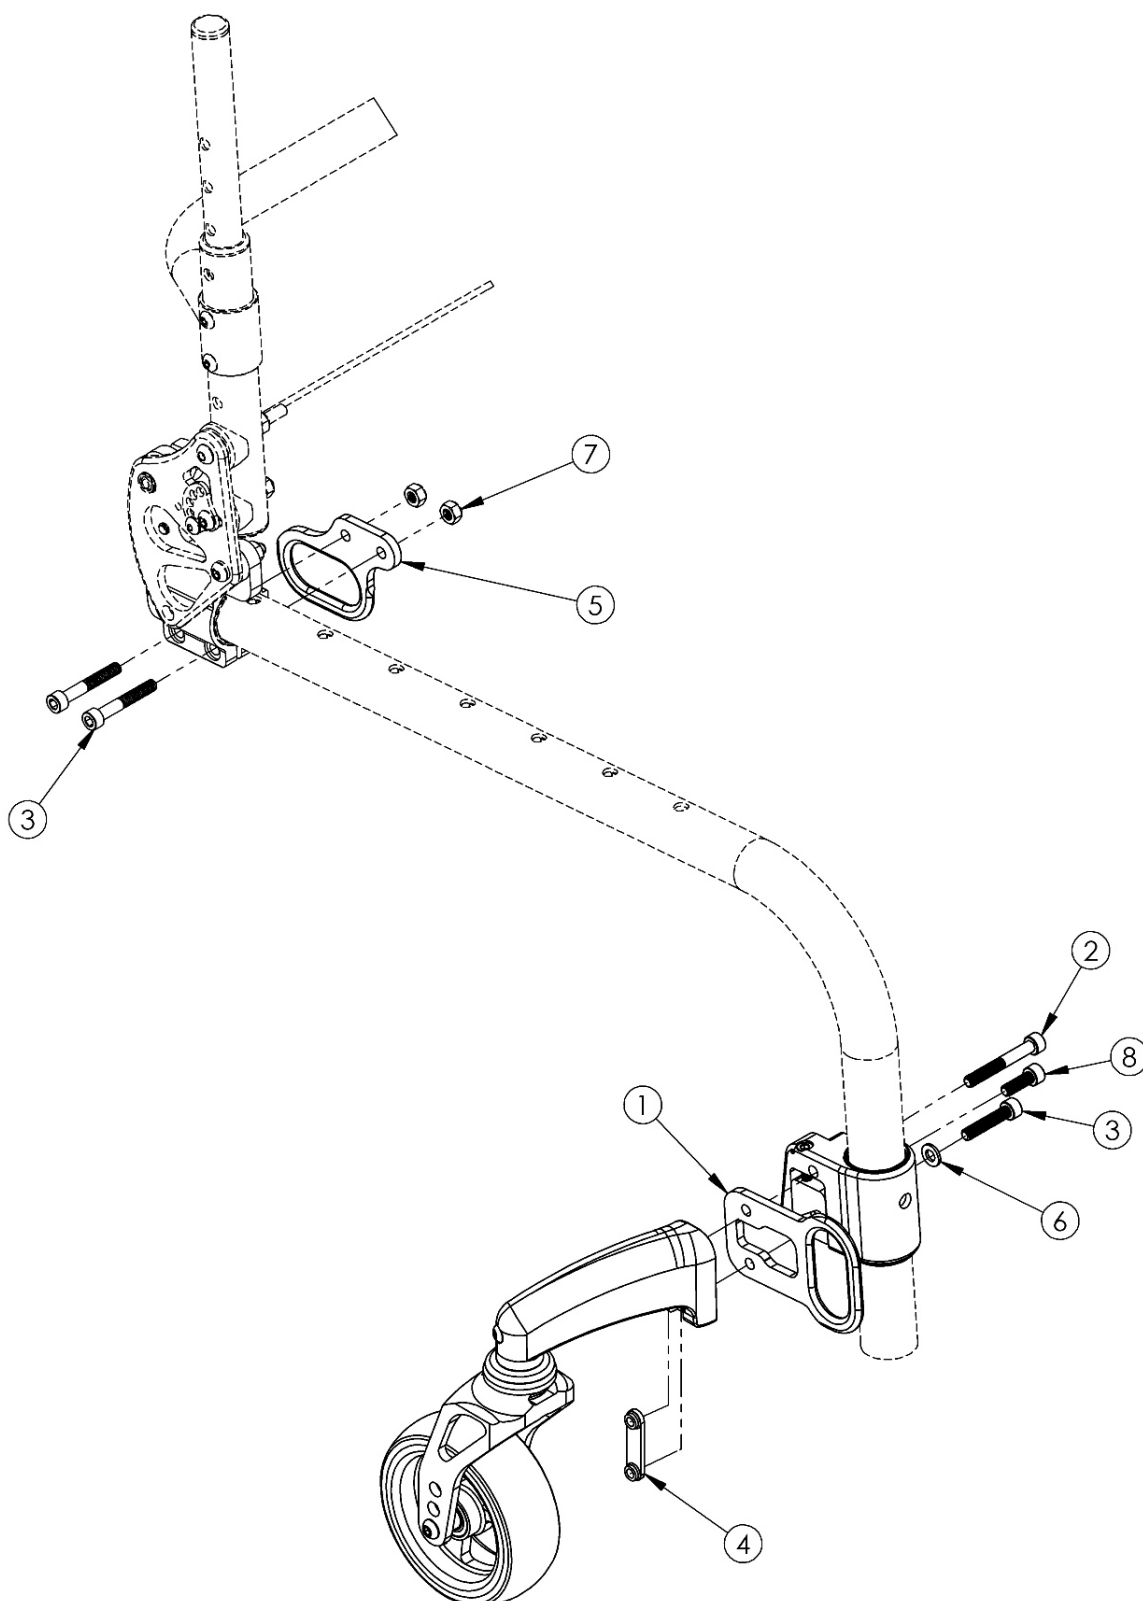

Chair configuration review required prior to parts being quoted or ordered. 0" minimum Center of Gravity is required with Transit.

| Item Number | Part Number | Description                                                                                                                             | Quantity |
|-------------|-------------|-----------------------------------------------------------------------------------------------------------------------------------------|----------|
| 1 - 8       | 502484      | Transit Retrofit Kit Clik<br><i>This kit is a complete retrofit, containing a pair of front and rear transit brackets and hardware.</i> | 1        |
| 2, 3, 6-8   | 119704      | Clik Caster Mount Transit Hardware Kit<br><i>Contains hardware for both sides</i>                                                       | 1        |
| 2           | 102473      | M6 X 50 CLS12.9 SHCS BLK ZC                                                                                                             | 2        |
| 3           | 101810      | M6 x 35 SHCS BLK ZC                                                                                                                     | 2        |
| 4           | 002462      | M6 X 1.0 Dual Hole Nut                                                                                                                  | 2        |
| 6           | 100746      | M6 Flat Washer Blk Zn                                                                                                                   | 4        |
| 7           | 100658      | M6 Nylock Nut Blk Zn                                                                                                                    | 4        |
| 8           | 101844      | M6 x 18 SHCS Blk Zn                                                                                                                     | 4        |