


Rogue2 User Activated Anti-Tip

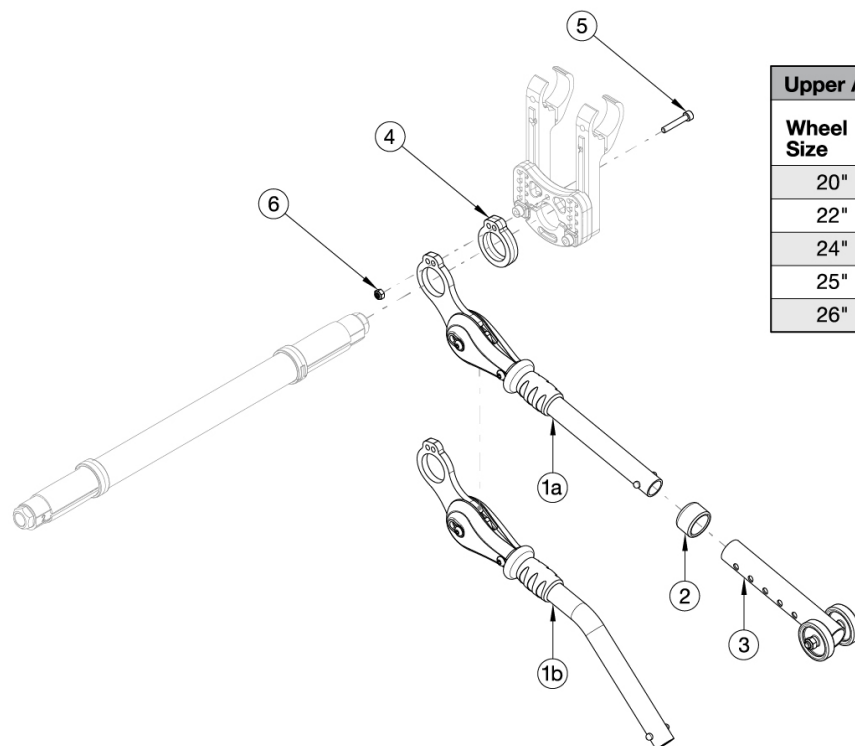

Upper Anti-Tip Assemblies					
Wheel Size	Dump				
	1"	2"	3"	4"	5"
20"	114197	116542	116542	114198	114198
22"	114197	116542	116542	116542	114198
24"	114197	114197	116542	116542	116542
25"	114198*	114197	114197	116542	116542
26"	114197*	114197*	116542*	116542*	116542*

* Requires extended lower assembly 116544

Complete assemblies contain "one" complete user activated anti-tip. Quantity two is required for a pair. A pair of User Activated Anti-Tips is not available if a tipping lever is present. Not available with One Arm Drive.

Item Number	Part Number	Description	Quantity
1-4, 6, 7, 8a, 9-19	117507	User Anti Tip Complete Assembly, Straight, Rogue2 / Rogue XP	1
1-3, 5a, 6, 7, 8a, 9-19	117508	User Anti Tip Complete Assembly, Bent, Rogue2 / Rogue XP	1
1-3, 5b, 6, 7, 8a, 9-20	117509	User Anti Tip Complete Assembly, Bent, 15 Degrees, Rogue2 / Rogue XP	1
1-4, 6, 7, 8b, 9-19	117590	User Anti Tip Complete Assembly, X-Large, Straight, Rogue2	1
1-3, 5a, 6, 7, 8b, 9-19	117591	User Anti Tip Complete Assembly, X-Large, Bent, Rogue2	1
1-3, 5b, 6, 7, 8b, 9-20	117592	User Anti Tip Complete Assembly, X-Large, Bent, 15 Degrees, Rogue2	1
2-4, 12-16	114198	Anti-Tip Upper Assembly Straight, User Activated, Rogue2 / Rogue XP	1
2-3, 5a, 12-16	114197	Anti-Tip Upper Assembly Bent, User Activated, Rogue2 / Rogue XP	1
2-3, 5b, 12-16	116542	Anti-Tip Upper Assembly Bent, User Activated, 15 Degrees, Rogue2 / Rogue XP	1
1	113998	Anti Tip Spacer	1
7	004306	Anti-Tip Anti Rattle Bushing	1

Item Number	Part Number	Description	Quantity
8a	119668	Anti-Tip Lower Assembly <i>Replaces 004691</i>	1
8b	116544	Anti-Tip Lower Assembly X-Large Rogue2 / Rogue ALX	1
18	116550	M5 x 0.8 x 30, SHCS CLS 10.9, PT, BLZ, DIN 912	1
19	100657	M5 Nylock Nut Blk Zn	1