


Rigid High Mount Angle Adjustable Flip Under Footrest

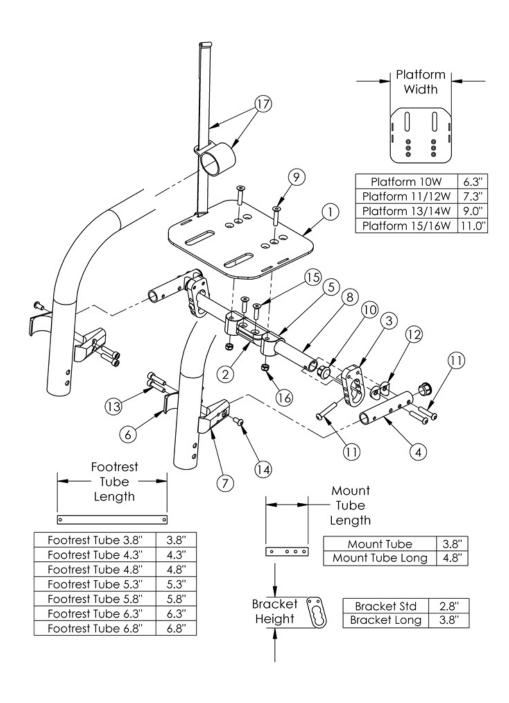

Use extended assemblies when chair has 2" or more Sling Position or 70°, 75° or 80° Front Frame Bend. Sizes based on straight frame/no taper. Not available with Heavy Duty Option

| Item Number | Part Number | Description | Quantity |
|-------------------------------------|-------------|--|----------|
| 1a, 2, 3a, 4a, 5 - 7, 8a, 9 - 17 | 501026 | Footrest Assembly Aluminum High Mount Flip 10" Rigid | 1 |

| Item Number | Part Number | Description | Quantity |
|-------------------------------------|-------------|---|----------|
| 1b, 2, 3a, 4a, 5 - 7, 8b, 9 - 17 | 501027 | Footrest Assembly Aluminum High Mount Flip 11" Rigid | 1 |
| 1b, 2, 3a, 4a, 5 - 7, 8c, 9 - 17 | 500593 | Footrest Assembly Aluminum High Mount Flip 12" Rigid | 1 |
| 1c, 2, 3a, 4a, 5 - 7, 8d, 9 - 17 | 500594 | Footrest Assembly Aluminum High Mount Flip 13" Rigid | 1 |
| 1c, 2, 3a, 4a, 5 - 7, 8e, 9 - 17 | 500595 | Footrest Assembly Aluminum High Mount Flip 14" Rigid | 1 |
| 1d, 2, 3a, 4a, 5 - 7, 8f, 9 - 17 | 500596 | Footrest Assembly Aluminum High Mount Flip 15" Rigid | 1 |
| 1d, 2, 3a, 4a, 5 - 7, 8g, 9 - 17 | 500597 | Footrest Assembly Aluminum High Mount Flip 16" Rigid | 1 |
| 1e, 2, 3a, 4a, 5 - 7, 8h, 9 - 17 | 505233 | Footrest Assembly Aluminum High Mount Flip 17" Rigid | 1 |
| 1e, 2, 3a, 4a, 5 - 7, 8i, 9 - 17 | 505234 | Footrest Assembly Aluminum High Mount Flip 18" Rigid | 1 |
| 1a, 2, 3a, 4b, 5 - 7, 8a, 9 - 17 | 502369 | Footrest Assembly Aluminum High Mount Flip Extended 10" Rigid | 1 |
| 1b, 2, 3a, 4b, 5 - 7, 8b, 9 - 17 | 502370 | Footrest Assembly Aluminum High Mount Flip Extended 11" Rigid | 1 |
| 1b, 2, 3a, 4b, 5 - 7, 8c, 9 - 17 | 502371 | Footrest Assembly Aluminum High Mount Flip Extended 12" Rigid | 1 |
| 1c, 2, 3a, 4b, 5 - 7, 8d, 9 - 17 | 502372 | Footrest Assembly Aluminum High Mount Flip Extended 13" Rigid | 1 |
| 1c, 2, 3a, 4b, 5 - 7, 8e, 9 - 17 | 502373 | Footrest Assembly Aluminum High Mount Flip Extended 14" Rigid | 1 |
| 1d, 2, 3a, 4b, 5 - 7, 8f, 9 - 17 | 502374 | Footrest Assembly Aluminum High Mount Flip Extended 15" Rigid | 1 |
| 1d, 2, 3a, 4b, 5 - 7, 8g, 9 - 17 | 502375 | Footrest Assembly Aluminum High Mount Flip Extended 16" Rigid | 1 |
| 1e, 2, 3a, 4b, 5 - 7, 8h, 9 - 17 | 505235 | Footrest Assembly Aluminum High Mount Flip Extended 17" Rigid | 1 |
| 1e, 2, 3a, 4b, 5 - 7, 8i, 9 - 17 | 505236 | Footrest Assembly Aluminum High Mount Flip Extended 18" Rigid | 1 |
| 1a | 000969 | Footrest Platform High Mount Angle Adjustable Flip Under 6.3" | 1 |
| 1b | 000970 | Footrest Platform High Mount Angle Adjustable Flip Under 7.3" | 1 |
| 1c | 000971 | Footrest Platform High Mount Angle Adjustable Flip Under 9" | 1 |
| 1d | 000972 | Footrest Platform High Mount Angle Adjustable Flip Under 11" | 1 |
| 1e | 002048 | Footrest Platform High Mount Angle Adjustable Flip Under 13" | 1 |
| 2 | 000953 | Footrest Flip Stop Clamp Rigid | 1 |
| 3a | 000687 | Footrest Flip Mount Bracket Rigid | 2 |
| 3b | 000908 | Footrest Flip Mount Bracket Long Rigid | 2 |
| | | Used as needed to achieve Seat to Footrest Length | |
| 4a | 000686 | Footrest Flip Mount Tube Rigid | 2 |

| Item Number | Part Number | Description | Quantity |
|-------------|-------------|---|----------|
| | | Used on chairs with 0" or 1" Sling Position when Front Frame Bend is 85° or 90° | |
| 4b | 000907 | Footrest Flip Mount Tube Long Rigid | 2 |
| | | Used on chairs with 2" or more Sling Position or 70°, 75° or 80° Front Frame Bend | |
| 5 | 000954 | Footrest Flip Pivot Rigid | 2 |
| 6 | 000559 | Footplate Flip Clamp A Rigid | 2 |
| 7 | 000560 | Footplate Flip Clamp B Recess Rigid | 2 |
| 8a | 000688 | Footrest Tube 3.8" Rigid | 2 |
| | | Used on 10" wide chairs with straight frame/no taper | |
| 8b | 000689 | Footrest Tube 4.3" Rigid | 2 |
| | | Used on 11" wide chairs with straight frame/no taper | |
| 8c | 000690 | Footrest Tube 4.8" Rigid | 2 |
| | | Used on 12" wide chairs with straight frame/no taper | |
| 8d | 000691 | Footrest Tube 5.3" Rigid | 2 |
| | | Used on 13" wide chairs with straight frame/no taper | |
| 8e | 000692 | Footrest Tube 5.8" Rigid | 2 |
| | | Used on 14" wide chairs with straight frame/no taper | |
| 8f | 000693 | Footrest Tube 6.3" Rigid | 2 |
| | | Used on 15" wide chairs with straight frame/no taper | |
| 8g | 000694 | Footrest Tube 6.8" Rigid | 2 |
| | | Used on 16" wide chairs with straight frame/no taper | |
| 8h | 002406 | Footrest Tube 7.3" Rigid | 2 |
| | | Used on 17" wide chairs with straight frame/no taper | |
| 8i | 002407 | Footrest Tube 7.8" Rigid | 2 |
| | | Used on 18" wide chairs with straight frame/no taper | |
| 9 | 101733 | M6 x 35 CLS10.9 DIN7991 FSHCS BLKZC | 2 |
| 10 | 100638 | Tube End Plug 3/4" | 2 |
| 11 | 101119 | M6 X 32 BHCS bright | 6 |
| 12 | 000053 | Saddle 3/4" | 4 |
| 13 | 100780 | M6 x 25 SHCS ZC | 4 |
| 14 | 100667 | M6 x 12 BTN SHCS BLKZC w/Patch | 2 |
| 15 | 100866 | M6 x 20 CLS12.9 DIN7991 FSHCS Blk Zc w/Patch | 2 |
| 16 | 100658 | M6 Nylock Nut Blk Zn | 2 |


| Item Number | Part Number | Description | Quantity |
|-------------|-------------|---|----------|
| 17 | 101082 | Footrest High Mount Flip Foot Strap Rigid | 1 |



Footplate Length Measuring Guide


Distance between Point A and Point B = Footplate Length

NOTE: The yardstick on the top plane of the seat frame must lie flat against frame. The yardstick going from the footplate to the second yardstick must be square against the hanger tube.

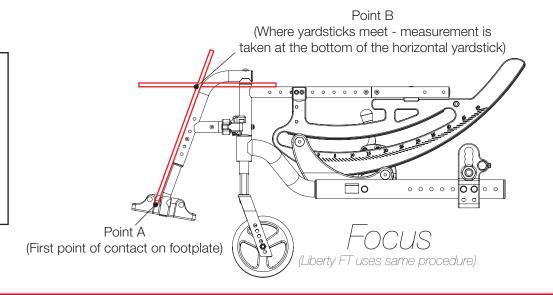

Distance between Point A and Point B = Footplate Length

NOTE: The yardstick on the top plane of the seat frame must lie flat against frame. The yardstick going from the footplate to the second yardstick must be square against the front tube.

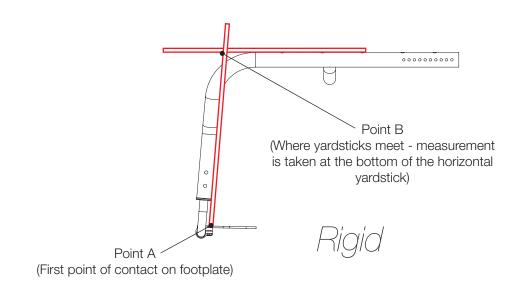

Distance between Point A and Point B = Footplate Length

NOTE: The yardstick on the top plane of the hanger must lie flat against hanger. The yardstick going from the footplate to the second yardstick must be square against the hanger tube.

