


Molift RgoSling Shadow

EN - User manual

molift[®]
a part of Etac

BM41001 Rev. B 2015-10-27

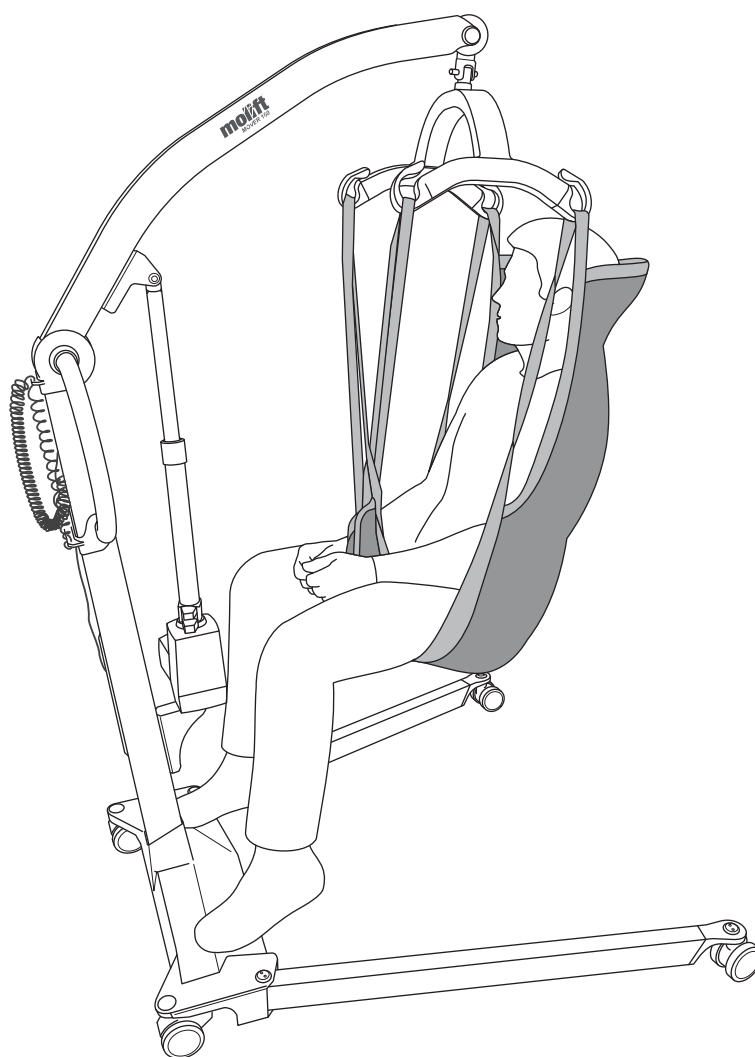

CE

Content

General.....	3
Declaration of conformity.....	3
Conditions for Use	3
Warranty	3
Label and symbols.....	3
Symbols.....	3
Molift RgoSling Shadow	4
About Molift RgoSling Shadow	4
Technical Data.....	5
Expected lifetime	5
Combination list	5
How to use Molift RgoSling Shadow	6
Before use / Daily check	6
Size guide.....	6
Sling checkpoints.....	6
Sling application.....	7
Transfer.....	8
Removing sling.....	9
Maintenance	10
Cleaning and disinfection	10
Recycling	10
Periodic Inspection	10
Periodic Inspection Scope.....	10
Troubleshooting	11

Important

This User Manual contains important safety instructions and information regarding the use of the sling and accessories.

In this manual the user is the person being lifted. The assistant is the person operating the lifter.



Warning!

This symbol indicates important information related to safety. Follow these instructions carefully.



Read User Manual before use!

It is important to fully understand the content of the user manual before attempting to use the equipment. Read the manual for both lift and sling

Visit www.etac.com for download of documentation to ensure you have the latest version.

General

Declaration of conformity



The Molift RgoSling Shadow and related accessories described in this operator manual are CE marked in accordance with EU Council Directive 93/42/EEC concerning medical devices, class 1, and has been tested and approved by a third party according to standard EN ISO 10535:2006.


Conditions for Use

Lift and transfer of a person will always pose a certain risk and only trained personnel are allowed to use the equipment and accessories covered by this user manual.

Warranty

2-year warranty against defects in workmanship and materials of our products.
For Terms and conditions, see www.etac.com

Label and symbols

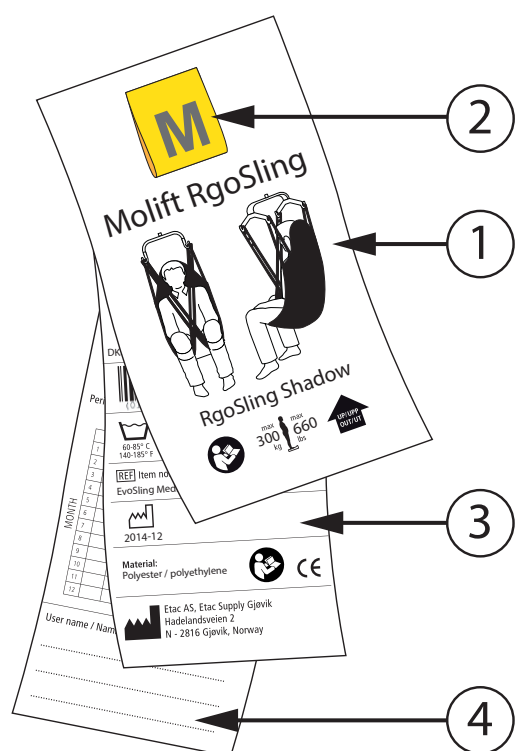

Symbols:



- Date of manufacture
YYYY-MM (year/month)



- CE marked



- Refer to user manual



- This way up, this side is outside




- Max user weight

Wash symbols - see "Maintenance" chapter.

1. Main label
2. Size label
3. Product label with barcode that contains EAN number (01), and serial number (21)
4. Periodic inspection label / Name tag

Molift RgoSling Shadow

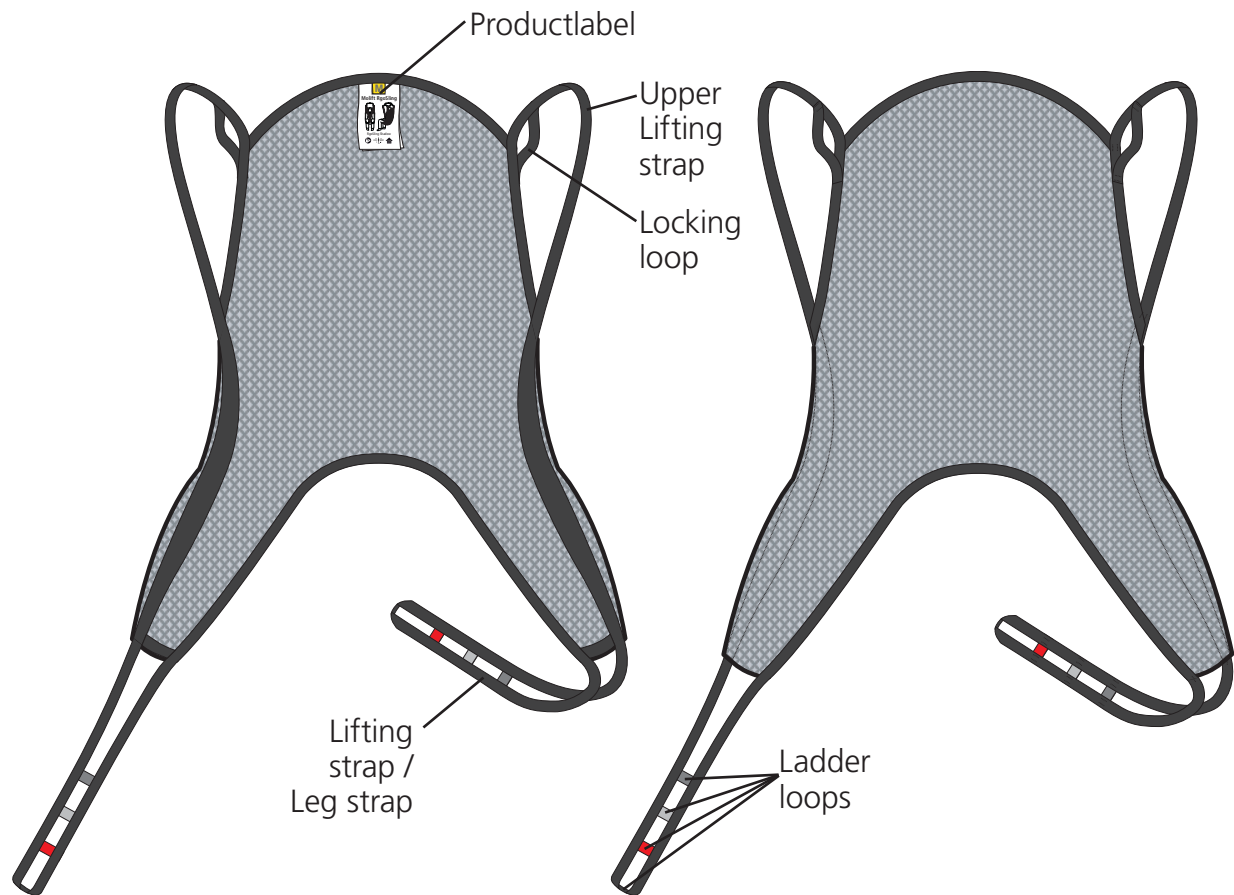

About Molift RgoSling Shadow

Etac supplies a wide selection of slings for different types of transfers. Molift RgoSling Shadow is suitable for users that require total support.

The sling is designed to be left under the user after transfer. It has no straps or seams on the surface that is supposed to be in contact with the user. RgoSling Shadow is especially suitable for users in moulded seat units.

The sling has a high back, headsupport and it supports the entire core. It has split leg support with a medium opening. RgoSling Shadow is not suitable for double leg amputees.

The slings can be used for lifting from a lying position to a sitting or lying position. Approved for users with weight up to 300kg.

Molift RgoSling Shadow is available in sizes XXS –XL, in Net polyester.

Molift RgoSling is developed to be combined with a 4-point suspension but the sling also works with a 2-point suspension. See the combination list for the correct sling and suspension combination.


Technical Data

Safe Working Load (SWL)

XS-XXL: 300 kg (660 lbs)

Material:

Polyester, Polyethylene

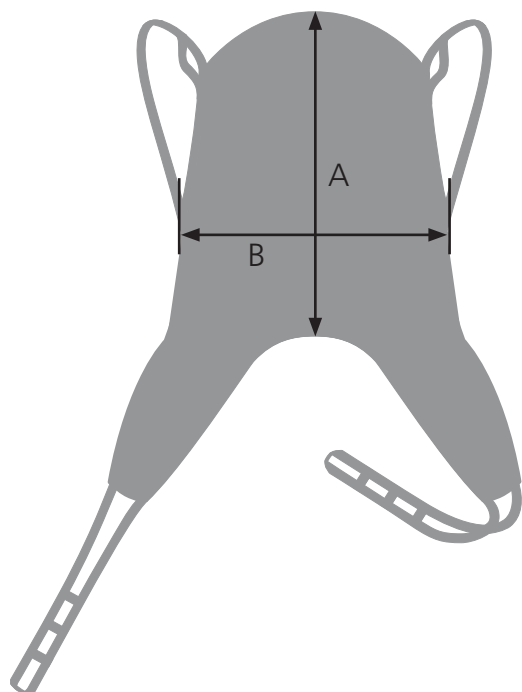


Dimensions (cm):

Størrelse	A	B
XXS	55	54
XS	68	63
S	80	69
M	92	76
L	98	91
XL	97	106

Lifting Strap Ladder loops

The ladder loops on lifting band gives different options for mounting sling to suspension. Use the ladder that makes sling most comfortable for user.

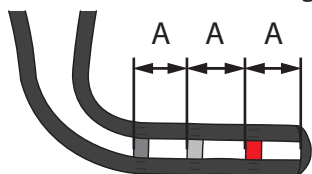

The ladder loops on the leg straps has different colours so strap can easily be fastened with equal length on left and right side. Distance between each ladder loop (A) is 9cm.


Expected Lifetime:


The product has an expected service life of 1 to 5 years under normal use. The service life of the product varies depending on usage frequency, materials, loads and how often it is washed.

Combination list

Molift RgoSling Shadow is designed for use with 4-point suspension but also works with 2-point suspension.

✓	= Recommended
✗	= Not recommended

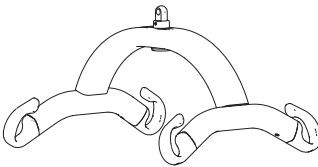 4 Point Suspension	XXS-S	M-L	XL
Small 340mm	✓	✓	✗
Medium 440mm	✓	✓	✓
Large 540mm	✓	✓	✓
X-Large 640mm	✗	✓	✓

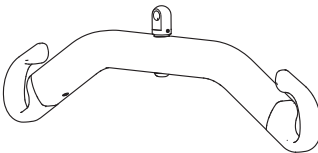 2 Point Suspension	XXS-S	M-L	XL
Small 340mm	✓	✓	✗
Medium 440mm	✓	✓	✓
Large 540mm	✗	✓	✓

How to use Molift RgoSling Shadow

General Safety Precautions

Only use accessories and slings that are adjusted to fit the user, type of disability, size, weight and type of transfer.



If maximum load (SWL) differs between lifter, suspension and body support unit, then the lowest maximum load shall always be used

It is important that the sling has been tested with the individual user and for the intended lifting situation. Make a decision on whether one or more assistants are required.

Plan the lifting operation in advance to ensure that it is as safe and smooth as possible. Remember to work ergonomically.

Assess the risks and take notes. You as the assistant are responsible for the safety of the user.



Molift slings shall only be used to lift persons. Never use the sling to lift or move objects of any kind.



The sling should not be stored in direct sunlight.

Before use / Daily check



Before using sling for first time it should be marked with the date of first time use on periodic inspection label.

Inspection to be performed daily or before use:


- ☐ Make sure user has the required ability for the sling
- ☐ Make sure the sling suitable for the lift/suspension to be used.
- ☐ Make sure sling does not have visible damage or frays.



Never use a faulty or damaged sling as it can break and cause personal injury. Destroy and discard damaged and old slings


Size guide

Measurements in table should be used as a reference. Correct size depends on the user's weight, function and body shape. Measure the waist size and back height on user in sitting position. Try the sling with most correct measurements to make sure it fits.

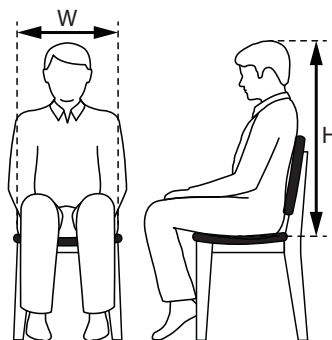

Size	User weight - kg (lbs)	Width (W) - cm	Height (H) - cm
XXS	12-17 (26-37)	25-30	45-60
XS	17-25 (37-55)	31-38	60-70
S	25-50 (55-110)	35-42	70-80
M	45-95 (99-210)	37-47	80-95
L	90-165 (198-353)	40-51	95-100
XL	160-240 (353-529)	45-57	100-105


Sling checkpoints

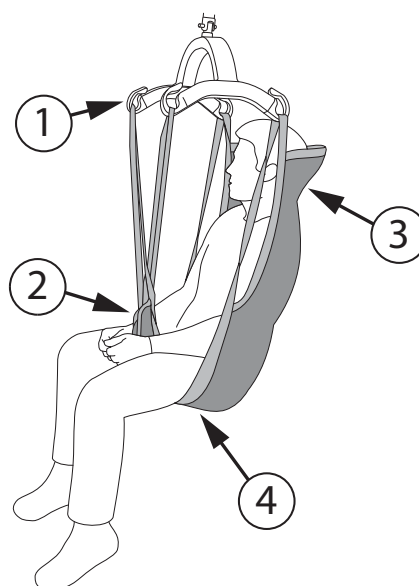


1. Suspension is not too close to the users head
2. Legstraps are crossed
3. Sling is placed to give sufficient head support
4. Legsupport is placed under users thigh without folds

Sling application


Sitting position

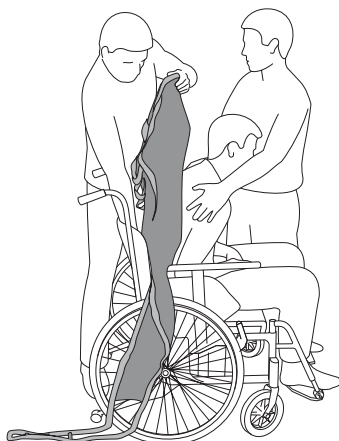

1. Ask the user to lean forward, support him if necessary with one hand. Slide the sling down behind the user's back until it reaches the seat. Make sure top of sling is placed so it gives support to users head.

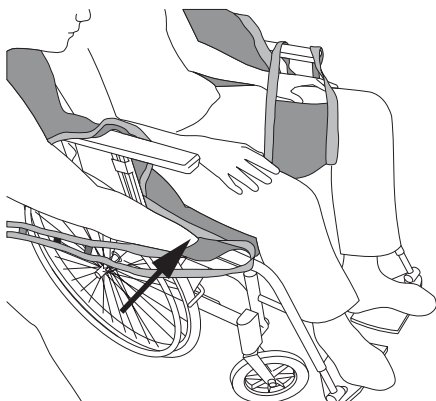


2. Pull the leg supports forward and position them under the user's thighs.

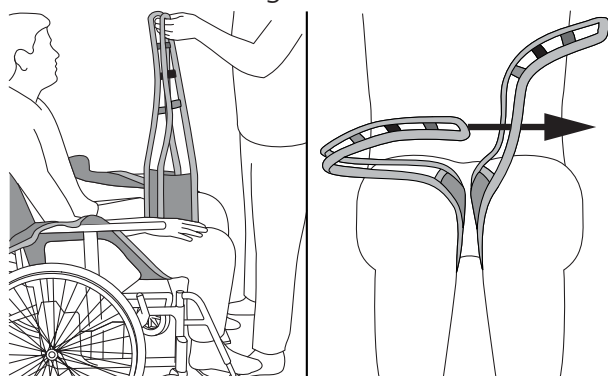


3. Make sure the lifting straps are the same length on both sides and that the sling is placed under the users thighs without any folds. Cross the leg loops by pulling one of the loops through the other and connect all 4 lifting straps to suspension. Make sure the lifting straps are fastened with equal length on right and left side. Legstraps can be mounted with different colour on ladder loop to make sure the straps are the same length on the left and right side. Make sure the user is in a comfortable and secure position in the sling.

Lying position

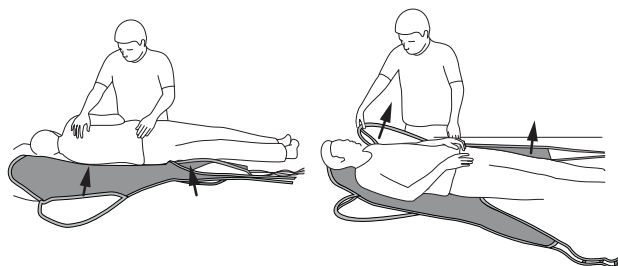


1. Turn the user towards you so that the user is lying in a safe position on their side. Place the sling with the bottom edge in height with the patient's tailbone. Make sure the sling is placed centered on the users back, and that top of sling is placed so it gives support to users head. Fold the sling so it is possible to pull out the folded side after turning the user over on the other side.

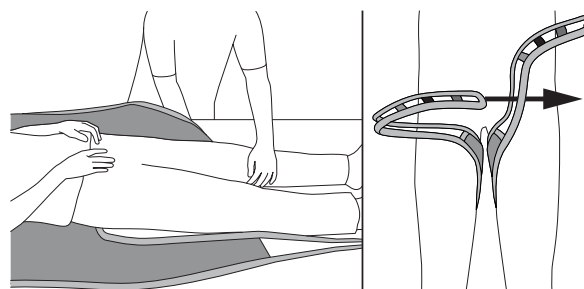

2. Pull the leg supports forward and position them under the user's thighs. Make sure the lifting straps are the same length on both sides and that the sling is placed under the users thighs without any folds.


Cross the leg loops by pulling one of the loops through the other and connect all 4 lifting straps to suspension. Make sure the lifting straps are fastened with equal length on right and left side. Legstraps can be mounted with different colour on ladder loop to make sure sling is comfortable and safe.

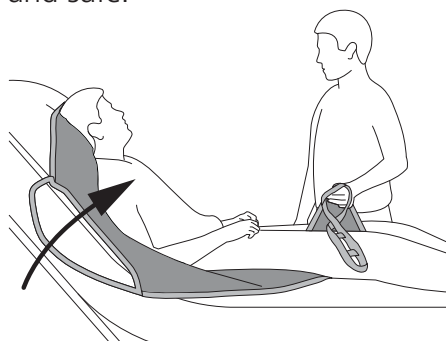

Raise the user closer to a sitting position before lifting if possible.

Transfer

When moving the user, stand to the side of the person you are lifting. Make sure that arms and legs do not obstruct the seat, bed, etc.

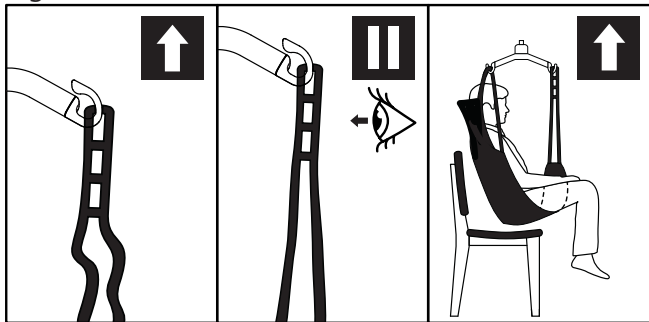

1. Check that the sling is correctly fitted around the user and that the strap loops are correctly fitted to the suspension hooks.
2. Start lifting until the lifting straps are stretched without lifting the user. Ensure that all four loops of the sling are securely fastened to avoid the user slipping or falling out of the sling.
3. Lift user, and perform transfer.



Never lift the user higher than necessary to carry out a lift. Remember that wheels on a mobile lift must NOT be locked.



Never leave a user unattended in a lifting situation.


Be careful during movement, the user may swing during turns, stops and starts. Be careful when maneuvering close to furniture and similar to prevent the suspended user from colliding with these objects.



The lifter shall not be used to lift or move users on sloping surfaces

Avoid deep pile carpets, high thresholds, uneven surfaces or other obstacles that may block the castors. The lifter may become unstable if forced over such obstacles increasing the risk of tipping over.

Lowering into sitting

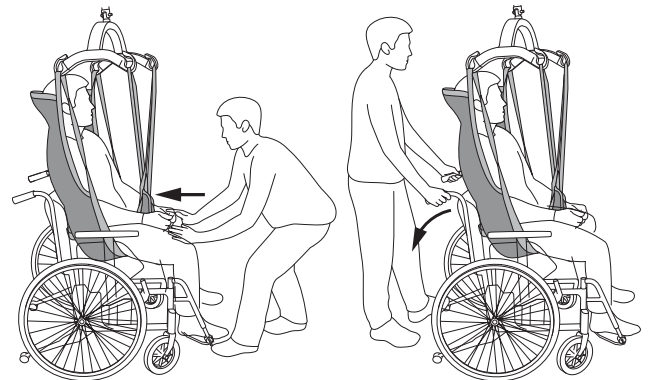


When transferring the user into sitting, the following techniques can be used for lowering the user as far back into the seat as possible:


- A Push gently on the users knees to steer the user in towards the backrest of the chair.
- B Tilt the seat backwards.



User must be facing lifter when lifting or lowering from or into a chair.

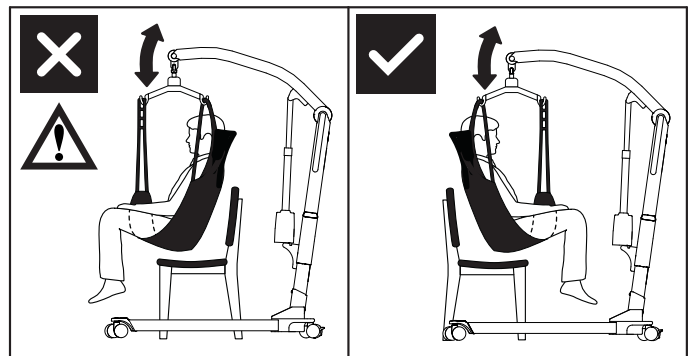


Removing sling

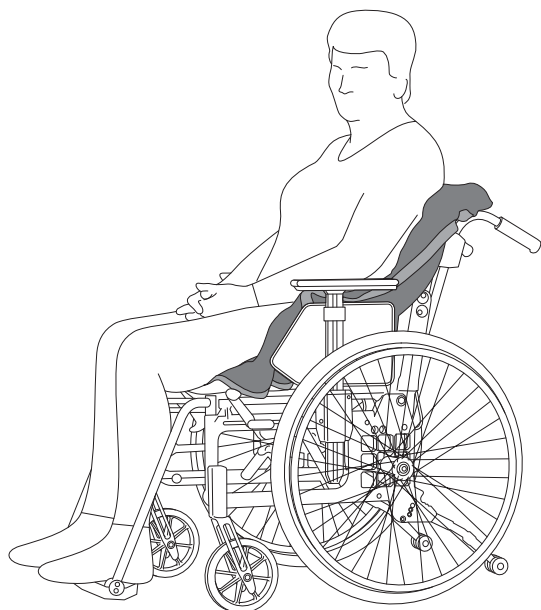

The sling is suitable to remain under the user after transfer. Make sure the leg supports are placed on the side, and not folded under the users thighs.

Sitting position

Lower the user into sitting position.
Release lifting straps from suspension.

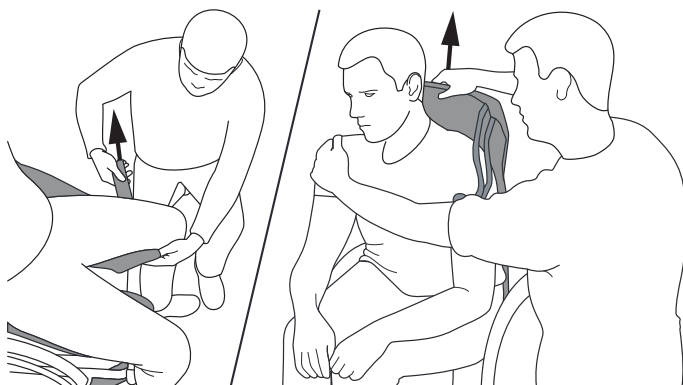


Remove the leg support by folding the leg support under the sling itself and the users thigh and pull out

Stand next to the chair and ask the user to lean forward. Support the user with one hand if necessary. Pull the sling away with one hand, and ask the user to lean back in the chair.

Lying position

Lower the user into lying position.
Release lifting straps from suspension.

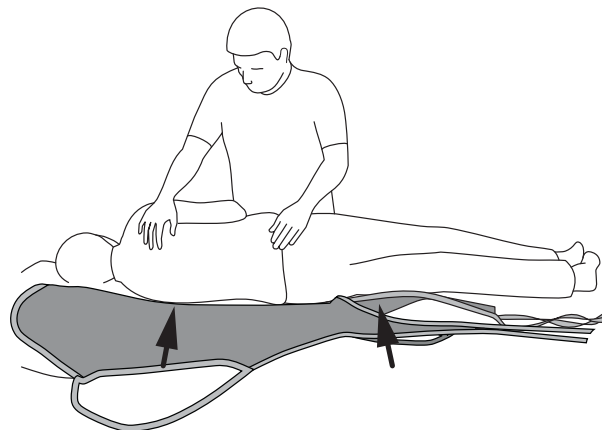

Turn the patient towards you so that the user is lying in a safe position on their side.

Fold the sling in the middle and position it behind the user's back.

Turn the user over on the opposite side and pull the sling away. Support the user with one hand if necessary.



If you pull the sling away hard, the user may roll over and out of bed, and be injured.



If you pull the sling up hard, the user may fall forwards and be injured.

Maintenance

Wash symbols:



Slings can be washed at temperatures ranging from 60 up to 85° C.



Tumble drying, max 45° C.



Do not iron



Do not dryclean



Do not bleach

Cleaning and disinfection

Washing and drying at higher temperatures wears out the material faster. The sling must be inspected regularly, preferably prior to each lifting operation but especially after it has been washed.



Make sure not to damage or remove labels when cleaning.

Recycling

Refer to "Recycling instructions" for how to properly dispose of product. This can be found on www.etac.com.

Periodic Inspection

Periodic Inspection Scope

Periodic inspection is a visual examination of the sling according to Periodic Inspection Report for Etac/Molift Slings. This can be found on www.etac.com.



If the inspection reveals any danger to safety, the sling shall immediately be taken out of service and be disposed of.

Periodic inspection must be carried out at least every 6 months. More regular inspection may be required if the sling is used or washed more often than is normal. The inspection must be performed by trained personnel.

When performing a periodic inspection, the inspector shall fill out the inspection report for Etac/Molift Slings. The reports should be retained by the person(s) responsible for inspecting the sling. If the inspection reveals defects and damages, the owner shall be notified.

When periodic inspection is completed the inspector shall mark periodic label showing the date when periodic inspection is performed.

The periodic inspection label can be found behind the product label, and this will then indicate

when next service should be performed (within 6 months from last inspection).

Periodic inspection performed								
YEAR								
	2014	2015	2016	2017	2018	2019	2020	2021
MONTH	1							
	2							
	3							
	4							
	5							
	6							
	7							
	8							
	9							
	10							
	11							
	12							

User name / Namn
.....
.....
.....

When sling is used for the first time, the periodic inspection label should be marked with month and year. That way it is easier to know when first periodic inspection should be performed.

Troubleshooting

Symptom	Possible Cause/Action
The sling does not fit the user.	Wrong sling size. Try other size.
	The sling is too small when the leg supports do not reach halfway around the inner thigh and the suspension is too close to the user's face. Try other size.
	The sling is too small when top of sling doesn't give support to users head and the suspension is too close to the user's face. Try other size.
	The sling is not correctly positioned. Pull the sling enough down at the back when fitting it.
All the straps does not lift at the same time.	If the sling straps lift unevenly, it means that the sling can slide up at the back which can lead to the user sliding down in the opening of the sling. Make sure that the leg supports are positioned correctly on the thighs.
User is sliding through/out of the sling.	The sling is not connected correctly according to individual prescription.
	The user is wearing too slippery clothes. Change or remove some of the clothing
	The sling is too big, try another size.

Etac AS
Etac Supply Gjøvik
Hadelandsveien 2, 2816 Gjøvik, Norway
Tel +47 4000 1004
molift@etac.com www.etac.com

molift[®]
a part of Etac